



18-10
FX9002
鋸齒水果匙
18.5cm



18-10
FX9003
奶油匙
17.5cm



18-10
FX9004
鋸齒餐叉
19cm



18-10
FX9005
鋸齒水果匙
14cm



18-10
FX9009
咖啡匙
12.2cm



18-10
FX9010
4爪麵叉
18.8cm



18-10
FX9011
蛋糕叉
13.4cm



18-10
FX9012
水果叉
12.6cm



18-8
FX9013
圓柄蛋糕叉
14.2cm



18-8
FX9014
3爪麵叉
17cm



18-8
FX9016
點心叉
13.8cm



18-8
FX9018
甜品匙
17.3cm



18-8
FX9019
可掛式水果叉
13.2cm



18-8
FX9020
可掛式咖啡匙
12.5cm



18-8
FX9021
可掛式奶油抹刀
14cm



18-8
FX9022
可掛式西餐叉
18cm



18-8
FX9023
可掛式西餐刀
19.7cm