



# FA系列



調汁匙

型號：FA-0280  
規格：19x23x0.1cm



奶油刀匙

型號：FA-0282  
規格：7.5x1x0.1cm



水果匙

型號：FA-0283  
規格：3.1x18.5x1.7cm



義大利麵叉

型號：FA-0285  
規格：18.5x2.3cm



型號：FA-0289  
品名：甜品匙



西餐刀

型號：FA-0750  
規格：1x20.6x0.4cm



西餐叉

型號：FA-751  
規格：2.8x17.8x0.9cm



西餐匙

型號：FA-752  
規格：4.3x17.8x1.9cm



西餐圓匙

型號：FA-753  
規格：4.4x17.1x1.9cm



茶匙

型號：FA-754  
規格：2.7x13.8x1.1cm



咖啡匙

型號：FA-755  
規格：2.4x12.1x1.4cm



水果叉

型號：FA-756  
規格：1.7x12.4x1.9cm



蛋糕叉

型號：FA-757  
規格：2.1x14x2.4cm



奶油刀

型號：FA-758  
規格：1.9x15.5x2.9cm



水果匙

型號：FA-760  
規格：2.8x14.1x2.9cm



冰淇淋匙

型號：FA-761  
規格：2.7x13x1.3cm



西瓜匙

型號：FA-764  
規格：2.8x13.2x1.9cm



甜品叉

型號：FA-5044  
規格：21.5x3.5x1cm



甜品匙

型號：FA-5045  
規格：18.5x3.5x2.4cm



咖啡匙

型號：FA-5047  
規格：17x3x1cm



水果匙

型號：FA-5049  
規格：18x3.2x1.5cm



西餐叉

型號：FA-5050  
規格：15.2x1.9x1.4cm



中湯匙

型號：FA-5051  
規格：15.1x3x1.6cm



西餐刀

型號：FA-5070  
規格：1.7x19.7x0.7cm



西餐叉

型號：FA-5071  
規格：2.6x17x2.1cm



西餐匙

型號：FA-5072  
規格：3.6x16.5x2.1cm



湯匙(圓)

型號：FA-5073  
規格：3.7x15.7x1.9cm



蛋糕叉

型號：FA-5074  
規格：1.9x13.5x1.8cm



茶匙

型號：FA-5075  
規格：2.7x13.2x1.7cm



水果叉

型號：FA-5076  
規格：1.5x11.8x1.7cm



咖啡匙

型號：FA-5077  
規格：2.5x11.8x1.4cm



奶油刀

型號：FA-5078  
規格：1.6x13.4x0.9cm



# FA+FC+FG系列



水果匙  
(鋸齒)

型號：FA-5079  
規格：2.5x13x2cm



冰淇淋匙

型號：FA-5080  
規格：2.8x12.6x1.7cm



草莓匙

型號：FA-5081  
規格：2.8x13.2x1.9cm



西瓜匙

型號：FA-5082  
規格：2.8x15.3x1.2cm



甜品匙

型號：FA-5083  
規格：2.9x12.2x1.8cm



茶匙

型號：FC-0526  
規格：18.1x1.6x1.9cm



型號：FC-0540  
品名：牛排刀叉組  
規格：26x8.3x2.5cm



型號：FG-5001  
品名：兒童料理刀  
(兔子/12.5cm)  
規格：21.9x4.2x1.5cm



型號：FG-5002  
品名：兒童料理刀  
(無尾熊/12.5cm)  
規格：21.9x4.2x1.5cm



型號：FG-5004  
品名：兒童削皮刀  
規格：8.8x7.4x2cm



型號：FG-5009  
品名：兒童料理工具組  
規格：8件組